


ZEBRA AND QUAGGA MUSSEL SUBSTRATE SAMPLER INSTRUCTIONS

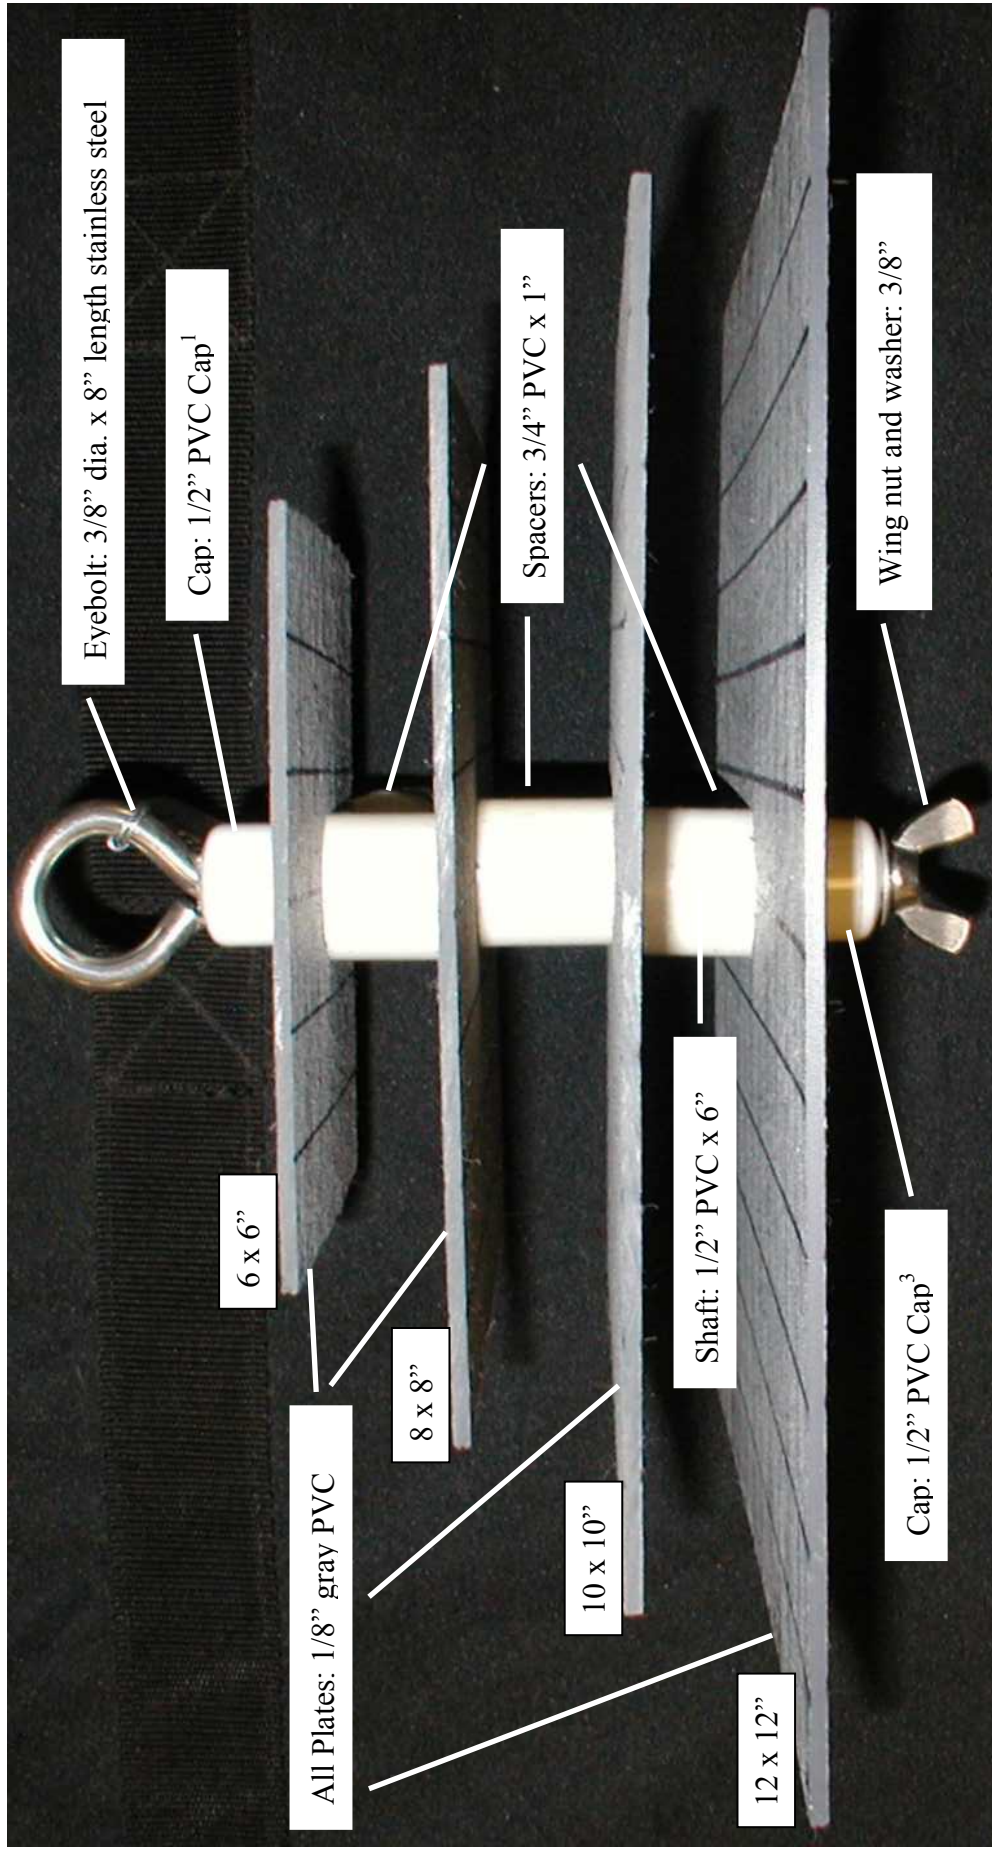

<sup>1</sup>Solvent weld top cap to shaft and drill a 13/32" hole in cap

<sup>2</sup>Drill 5/8" hole in plates to accept shaft

<sup>3</sup>Drill a 13/32" hole in bottom cap